


Step ①




Original Condition

Step ②

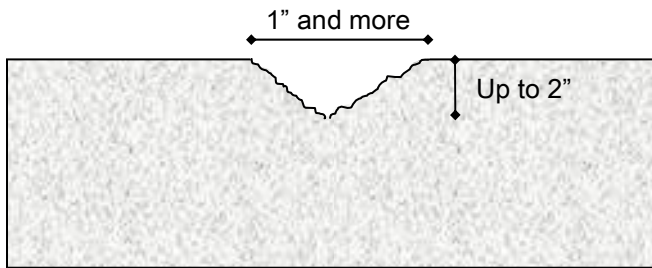

Actual Condition

Step ③

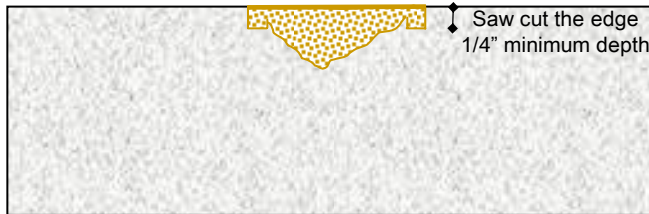

Epoxy Mortar

- Clean and solvent wipe concrete.
- Mix 70714/70715 or 70708/70709 with 40-95 silica sand at a ratio of 1:4 and fill, pack and trowel the crack.

- a.- After it cures top coat with 70714-xx/70715 or 70708-xx/70709 at 100 sf/gal.
- b.- You are done...

NEOGARD
Division Of Jones-Blair

JOB NAME:

Major Repair

Neogard is a manufacturer of materials and not a designer, architect, or engineer. Details prepared by Neogard are schematic only, to be used as a guide for the convenience of Neogard's customers.

SCALE:
N.T.S.

DRW. NO.:
NEO-FL-13

DATE:
1/5/2007