


**EXISTING CONDITION**

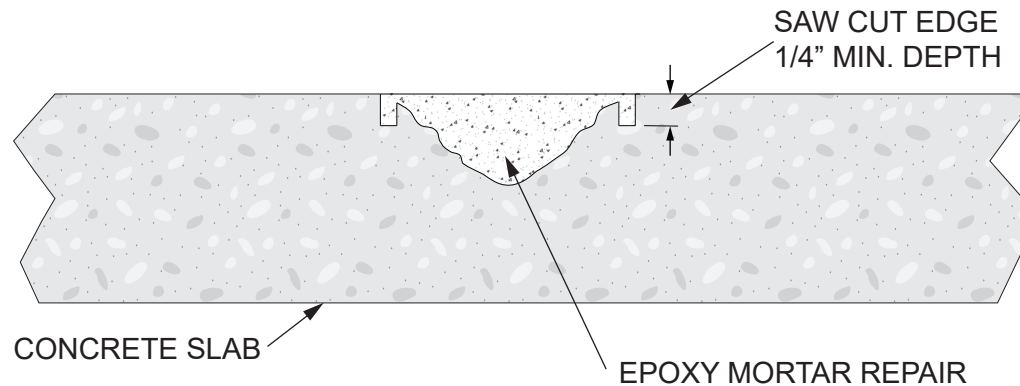

- EPOXY MORTAR REPAIR**
- Clean and solvent wipe concrete.
  - Mix 70714/70715 or 70714/70715-09 with 20/40 silica sand at a ratio of 1:4 and fill, pack and trowel flush.

Note: This detail is utilized in the specification and design of fluid-applied flooring, in both new and retrofit applications. It is provided to show a generally recommended procedure for dealing with the condition shown. It will not and cannot provide a specific solution for every condition likely to be encountered in field application. Where field conditions differ, the use of applicable portions of the detail shown or its adaptation by an experienced and conscientious applicator should result in a quality project.



2728 Empire Central  
Dallas, Texas 75236  
(214)-353-1600  
www.neogard.com

Project:

Major Concrete Repair

Drawn by:  
K. Kirby

Scale:  
NTS

Date:  
03/30/2020

Drawing/Index No.  
FLOR\_major-concrete-03302020